


Aloe-Enriched Diaper Skin Touch

Discover the gentle touch of Aloe-Enriched Diaper Skin Touch. Infused with the goodness of aloe, this unique lotion offers an embrace of natural comfort, ensuring every diaper change is a moment of nurturing care for your little one.

Item	Ingredient	Wt%
1	DI WATER	2.50
2	<u>INNOALOE ALOE VERA GEL CONCENTRATE 10:1</u>	1.00
3	Paraffin Wax	15.0
4	Cetearyl Alcohol	25.0
5	Cetyl alcohol	10.0
6	PEG 2000	3.00
7	Glycerine	15.0
8	Bee wax	7.00
9	Propyl paraben	0.50
10	Propylene glycol	1.00

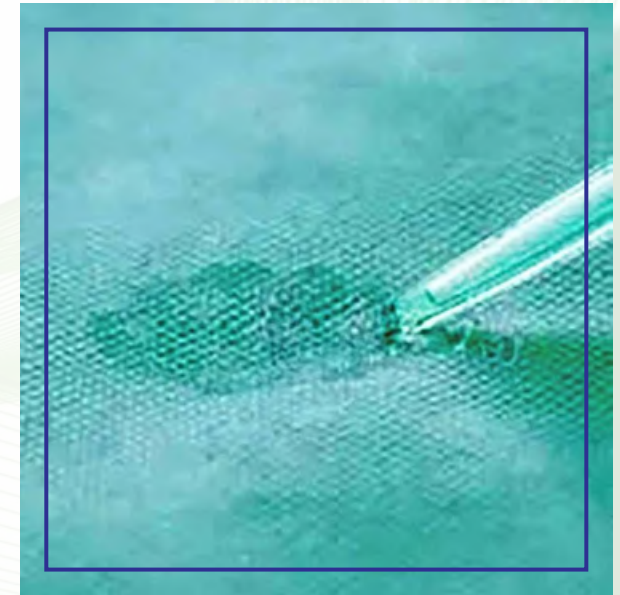

Procedure:

1. Heat the water between 50 – 60 °C, add the aloe vera and begin mixing for 10 minutes.
2. Keeping the temperature between 40 – 45 °C, mix the zinc oxide until grump free.
3. On a separate vessel heat the paraffin wax between 55 – 65°C, keeping at that temperature mix the cetyl alcohol, cetearyl alcohol, PEG 2000, glycerine and bee wax until it is all melt and grump free at medium speed.
4. Mix both vessels at high speed maintaining between 30 – 40°C.
5. Mix the batch until smooth and grump free.
6. Add conservatives (propylene glycol and propyl paraben). Continue mixing and let cool.

*DISCLAIMER

The information contained herein is being furnished for informational purposes only, upon the express condition that the User makes its own assessment of the appropriate use of such information. While the information contained herein is believed to be reliable, no representations, guarantees or warranties of any kind are made as to its accuracy, suitability for a particular application or the results to be obtained herefrom. Agromayal Botanica SA de CV. ("AMB") cannot guarantee how any products associated with this information will perform in combination with other substances or in User's process. Due to the variations in methods, conditions and equipment used commercially in processing these materials, no warranties or guarantees are made as to the suitability of the information/products for the applications disclosed. AMB shall not be liable and the User assumes all risk and responsibility for, any use or handling of any material beyond AMB's direct control. AMB WELLNESS MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. It is the User's sole responsibility to determine if there are any issues relating to patent infringement of any component or combination of components relating to the supplied information. Nothing contained herein is to be considered as permission, recommendation, nor as an inducement to practice any patented invention without the permission of the patent owner. This suggested formulation is only a representative formulation and it is not a commercialized product. AMB WELLNESS believes that the information and data on which this formulation is based are reliable, but it has not been subjected to extensive testing for performance, efficacy or safety. BEFORE COMMERCIALIZATION, YOU SHOULD THOROUGHLY TEST THE FORMULATION OR ANY VARIATION OF IT TO DETERMINE ITS PERFORMANCE, EFFICACY AND SAFETY. IT IS YOUR RESPONSIBILITY TO OBTAIN ANY NECESSARY GOVERNMENT CLEARANCE, LICENSE OR REGISTRATION. In addition, AMB has not undertaken a comprehensive patent search on the formulation. Suggestions of uses should not be taken as inducements to infringe any particular patent.